



Roof Cheques

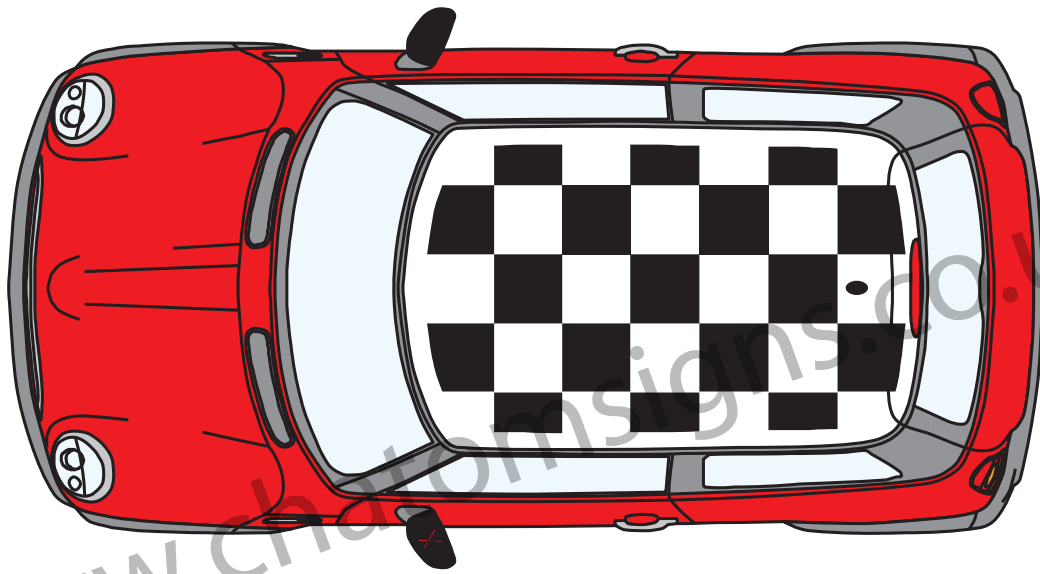


The colour of your roof is the background colour.
Example shows a black kit.

Colour Range

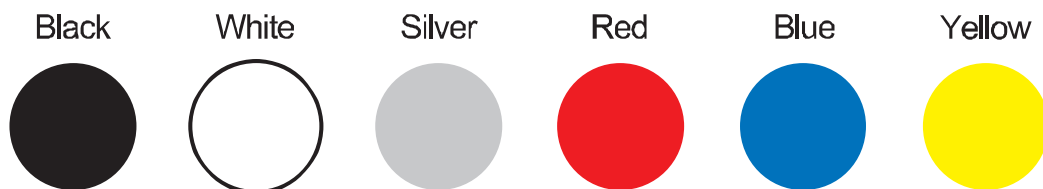


Chequered Kit Installation Guide

This is How you will receive your kit

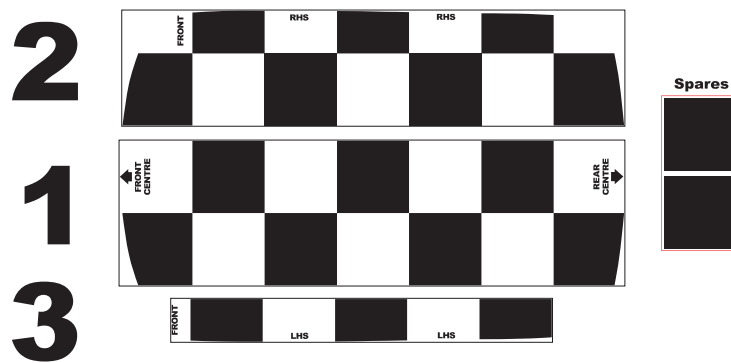

Where Do I start?

Start the tip of the arrow
80mm in From the Front edge
(Section 1)

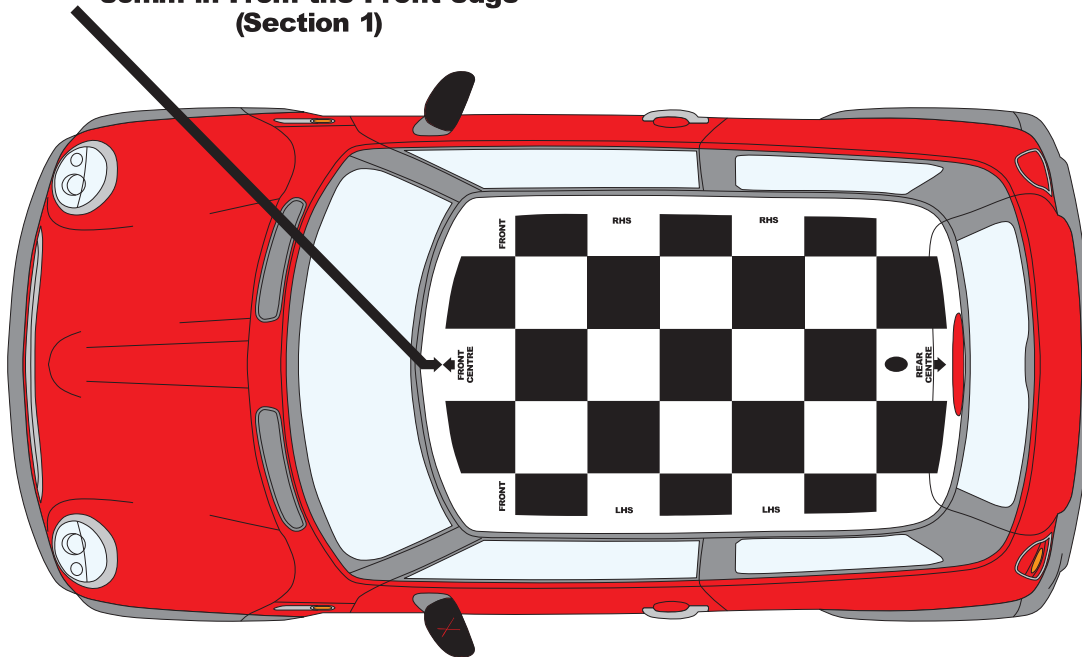

**Apply section 2,
Then Section 3**

Peel off your carrier tape, peel off the arrows.